

DVD Burning Manual

In order to burn recorded files you need to have a DVD-R disc!

Open DVR Burner tray and put DVD-R disk in before you start backup process.




Make right mouse click on DVR screen, then point on **Setup** icon.



Select **Backup** icon.

2.

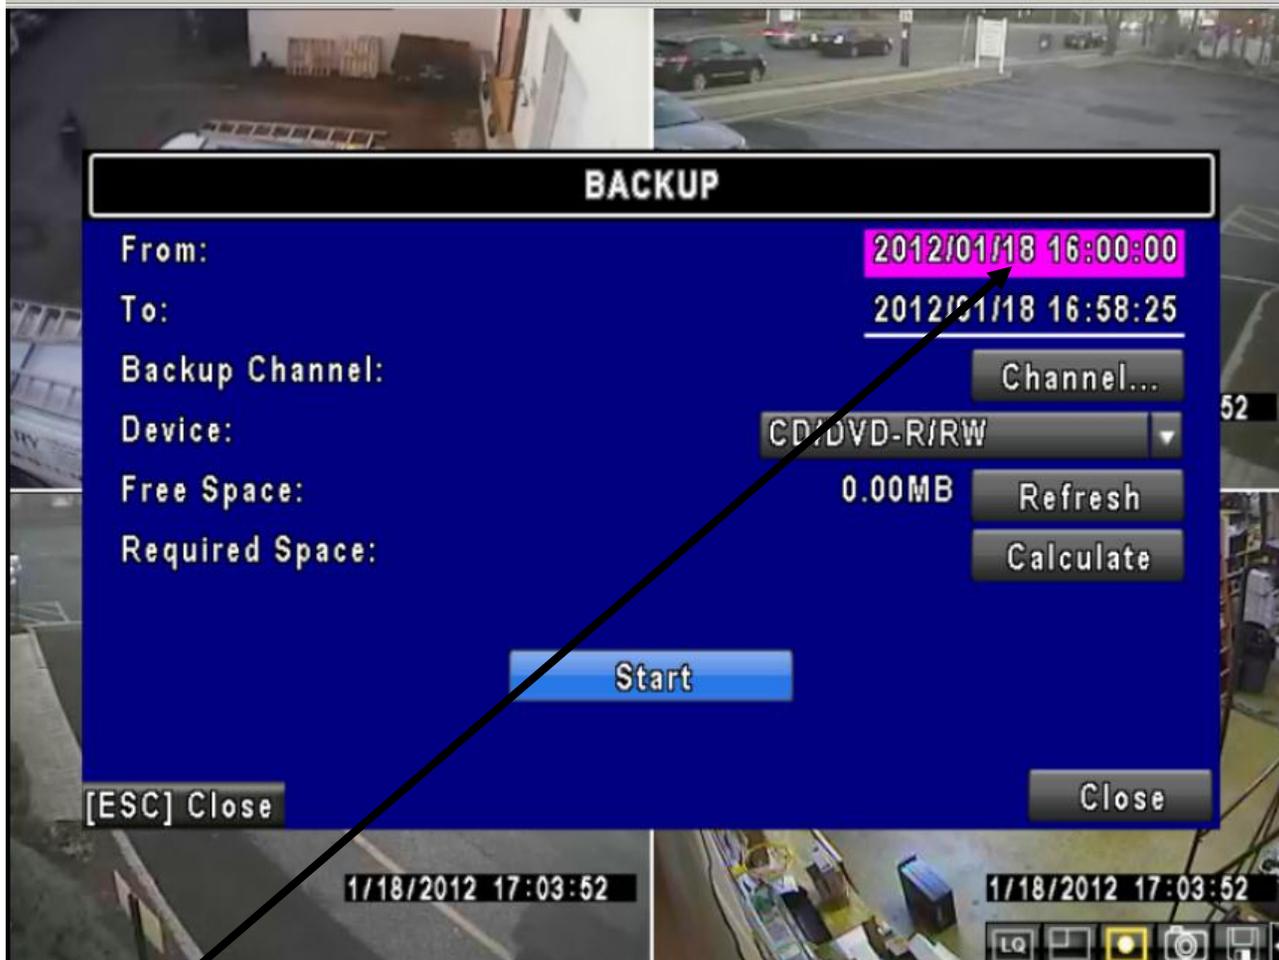

Click on **From:** option to select the start (Year/Month/Date/Time) of the video needed to burn to DVD.




Use arrows or click on the button for more options to select proper **Year**.




Use arrows or click on the button for more options to select proper **Month**.



Select proper Date.

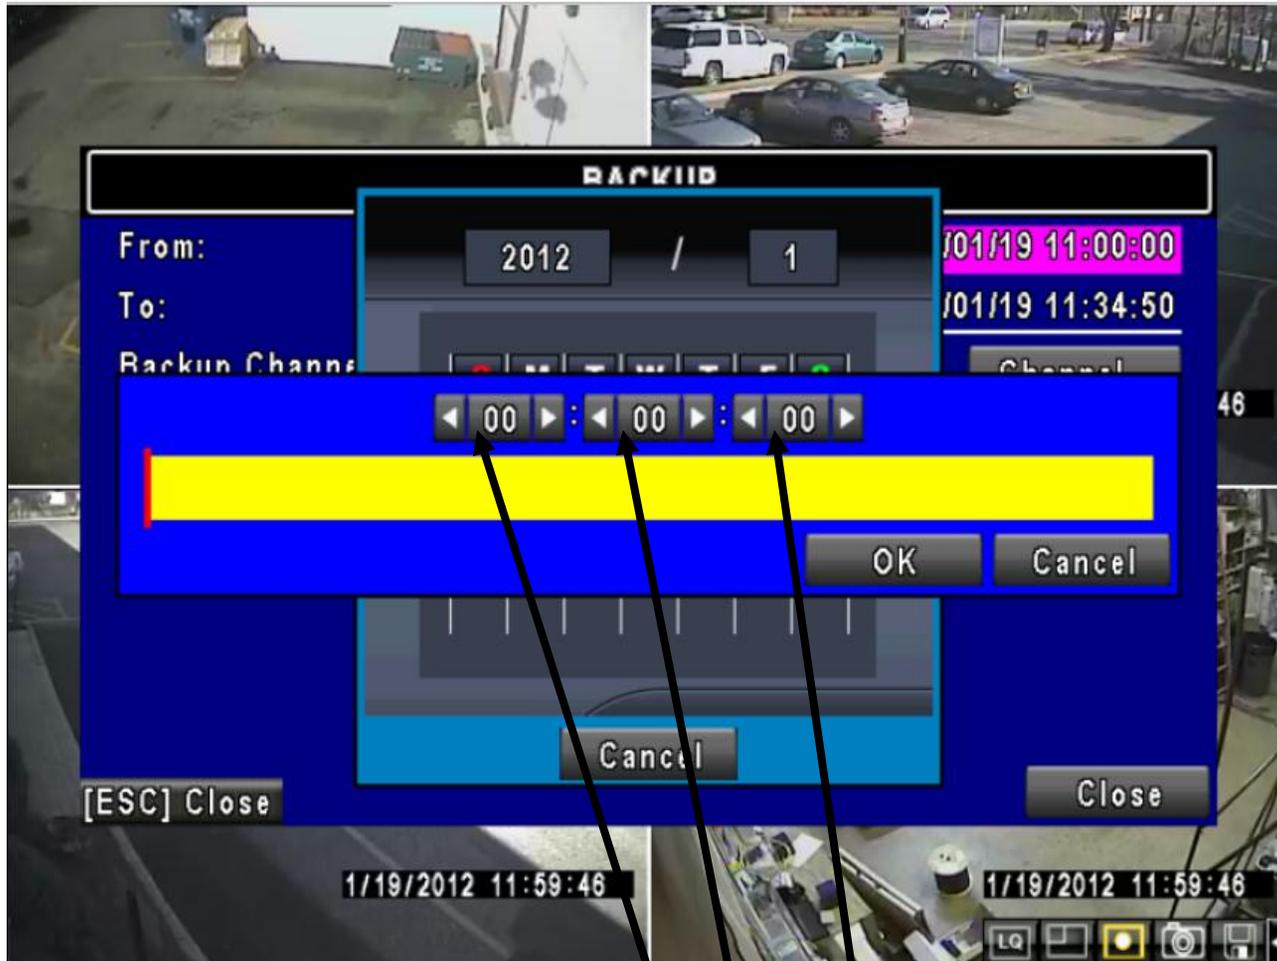


Use arrows or click on the button for more options to select (**Hour, Minute & Second**) the beginning of the video event to burn.

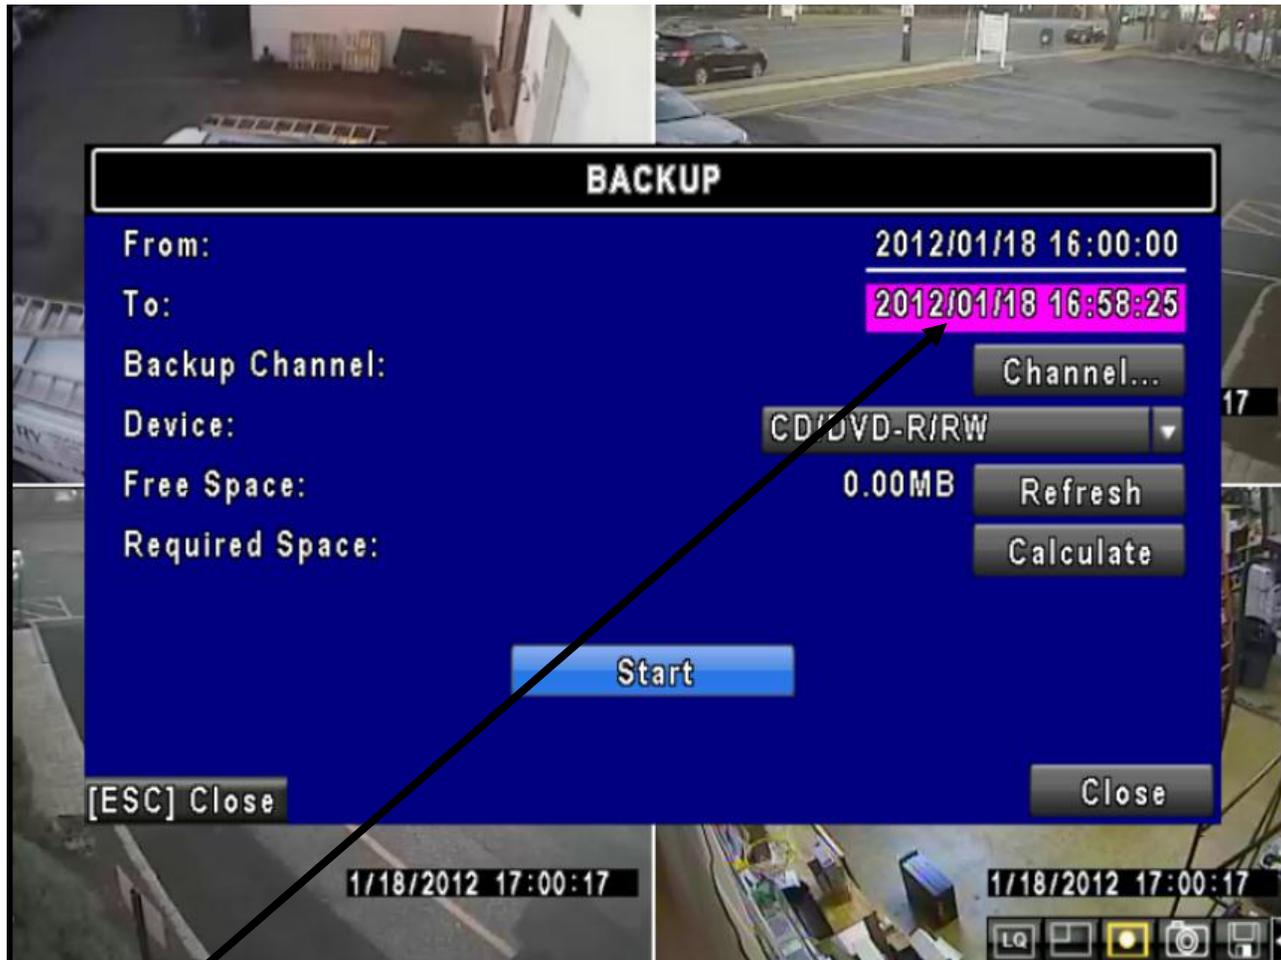

Click on **To:** option to select **(Year/Month/Date/Time)** the end of the video needed to burn to DVD.

(Repeat steps on page 4, 5, 6 & 7 to select the end of the video event)

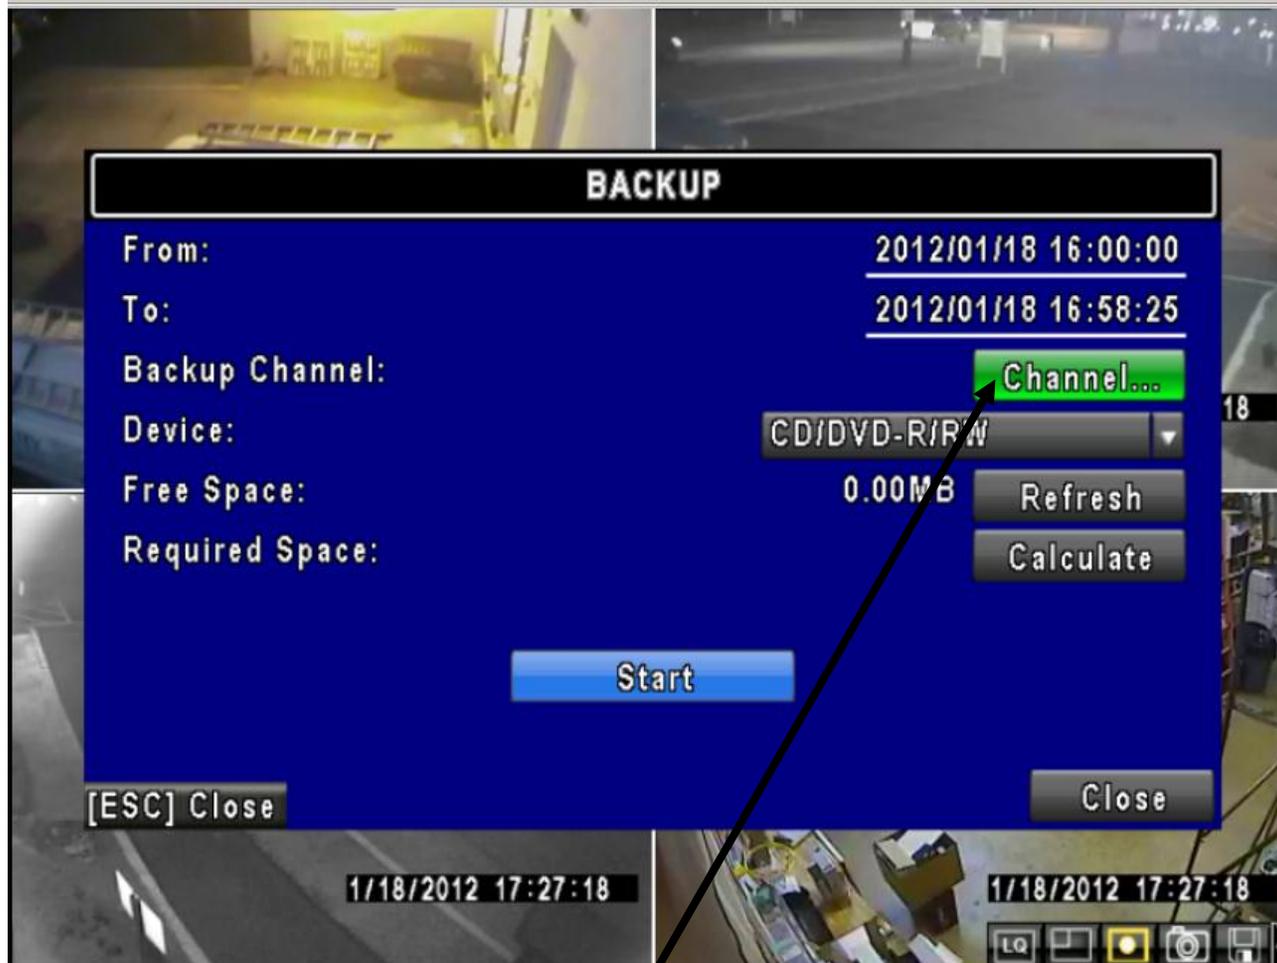

Click on **Channel** button.



Click on **checked boxes** to deselect cameras from DVD burning process. Only cameras needed to backup should be checked.



Click on **Refresh** button to see the size of the DVD-R disk.



Click on **Calculate** button for system to count the size of the video to burn to DVD disk.

Then click on **Start** button to begin saving selected video segment to DVD disk.




Wait until indicator line reaches 100%. Depending on the video size selected, times will vary.




Click **Close** button to exit from backup screen.

Take out DVD disk from DVR's burner tray and put in your PC DVD-ROM/DVD-WR tray. If auto play does not launch, click Start select Computer.


Double click on DVD drive to see the contents of the disk.

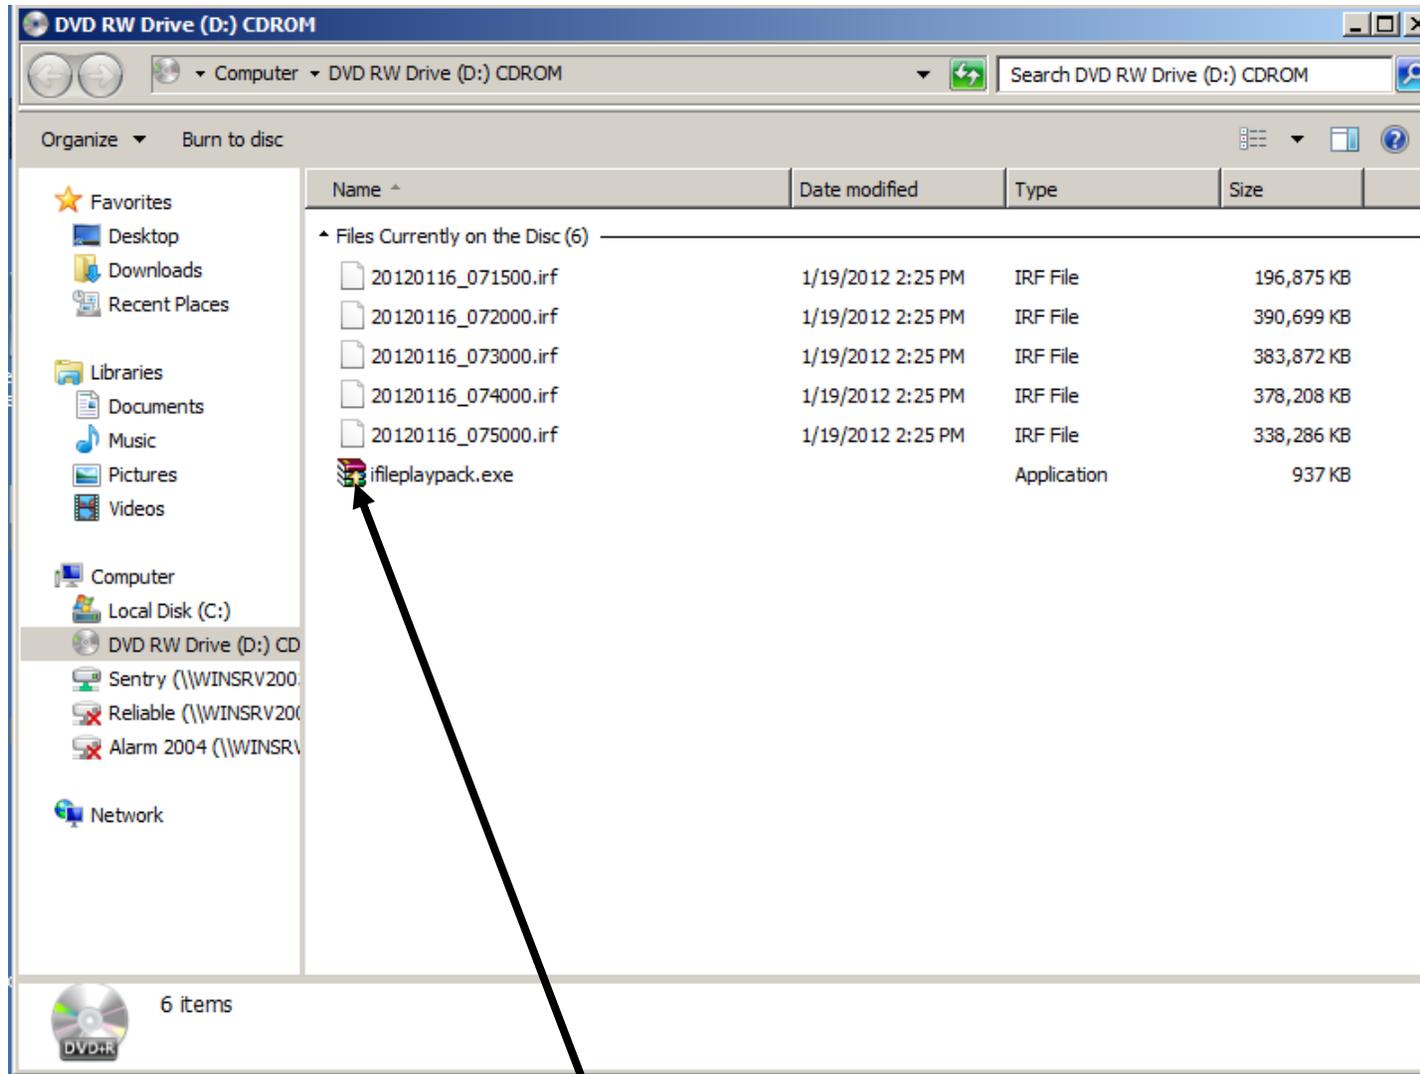


Double click on **ifileplaypack.exe** to launch backup player program.

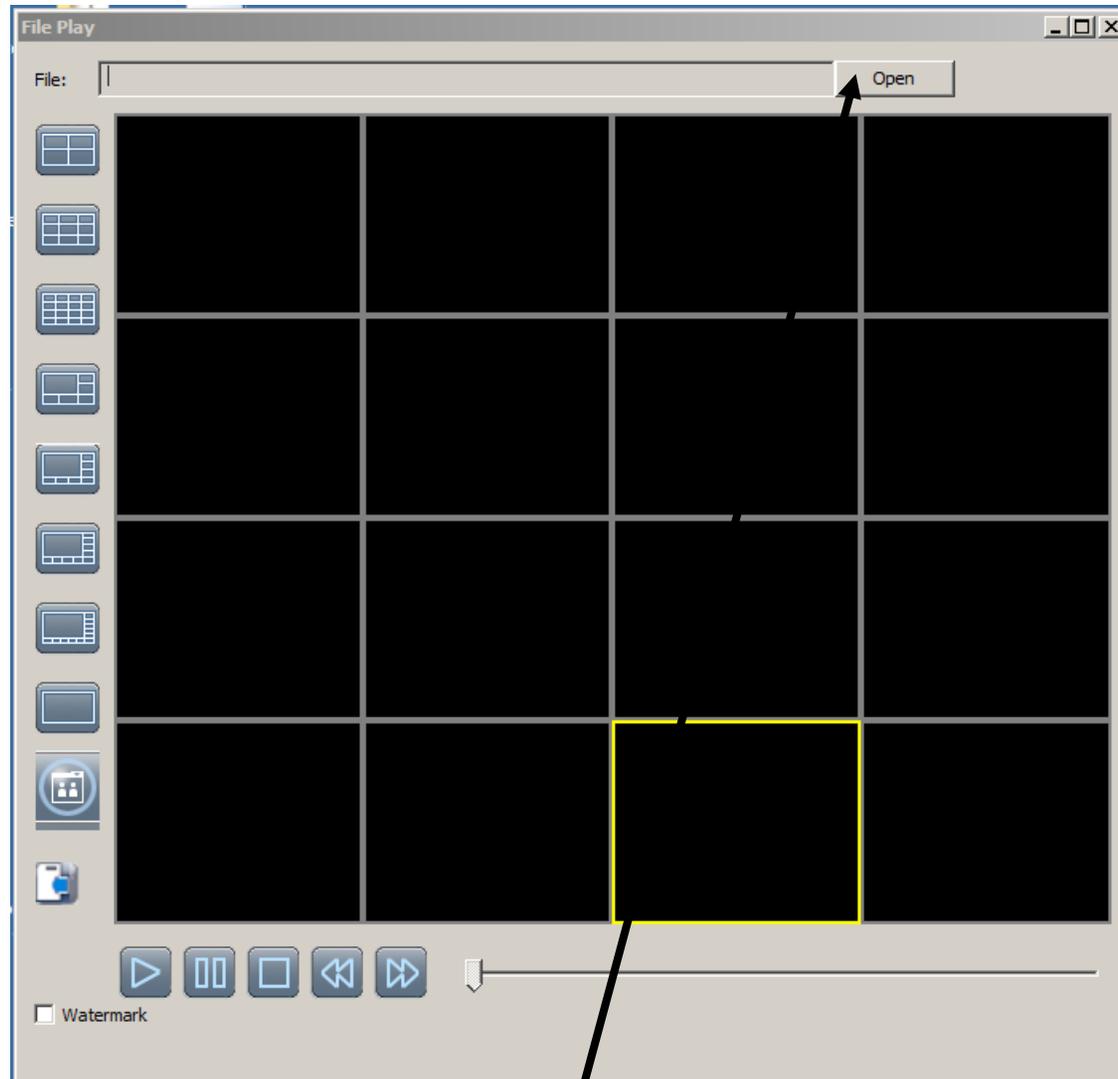

Click on **Open** button.

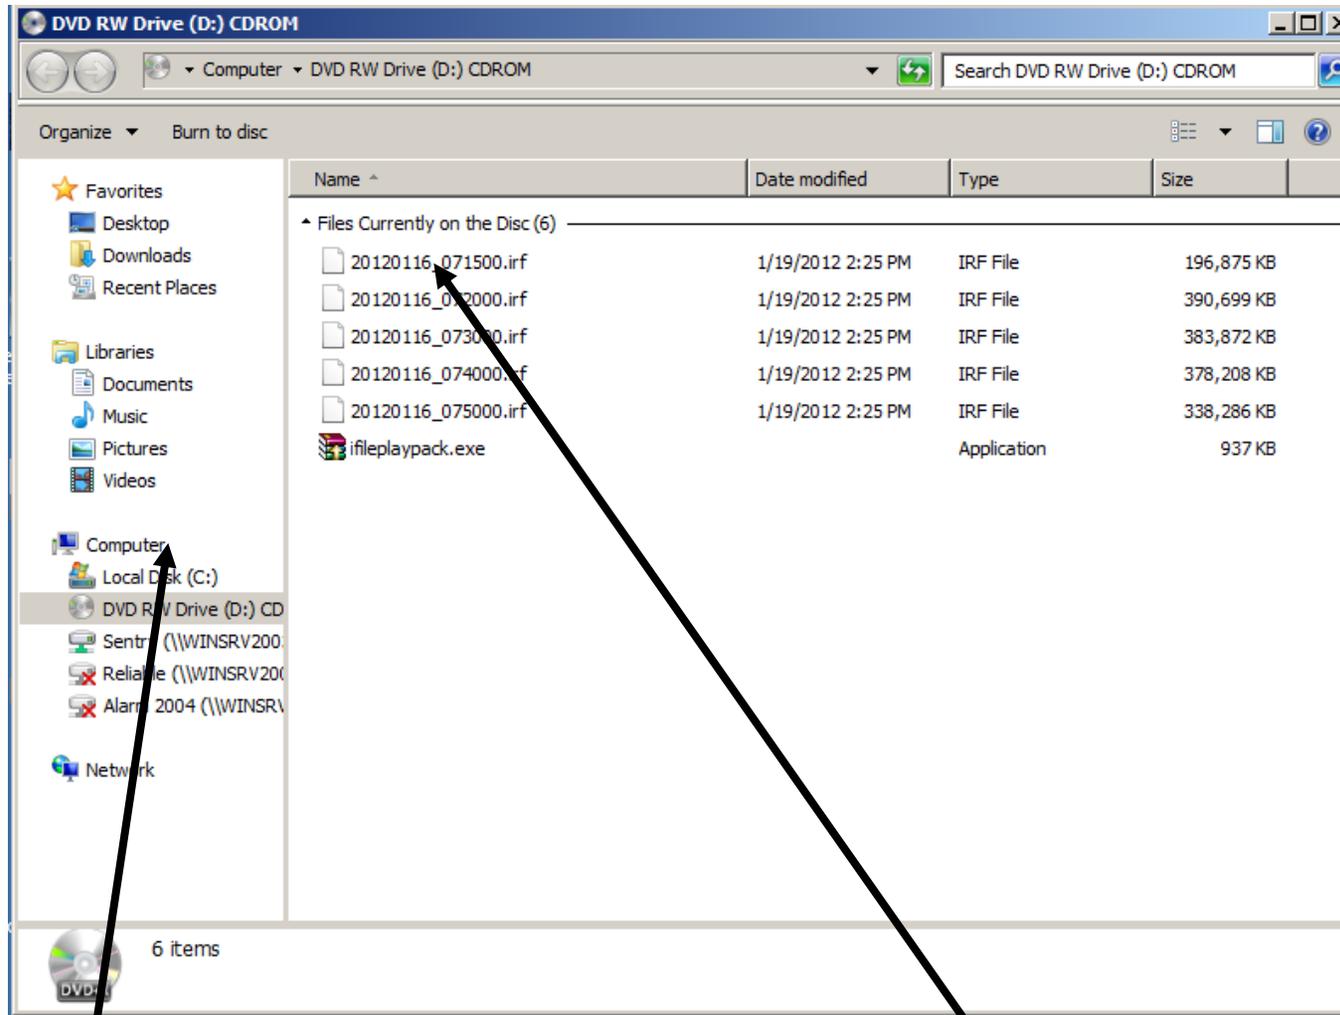

Select **Computer** folder, then double click on DVD RW drive. Next, double click on **saved** file to playback recorded video.

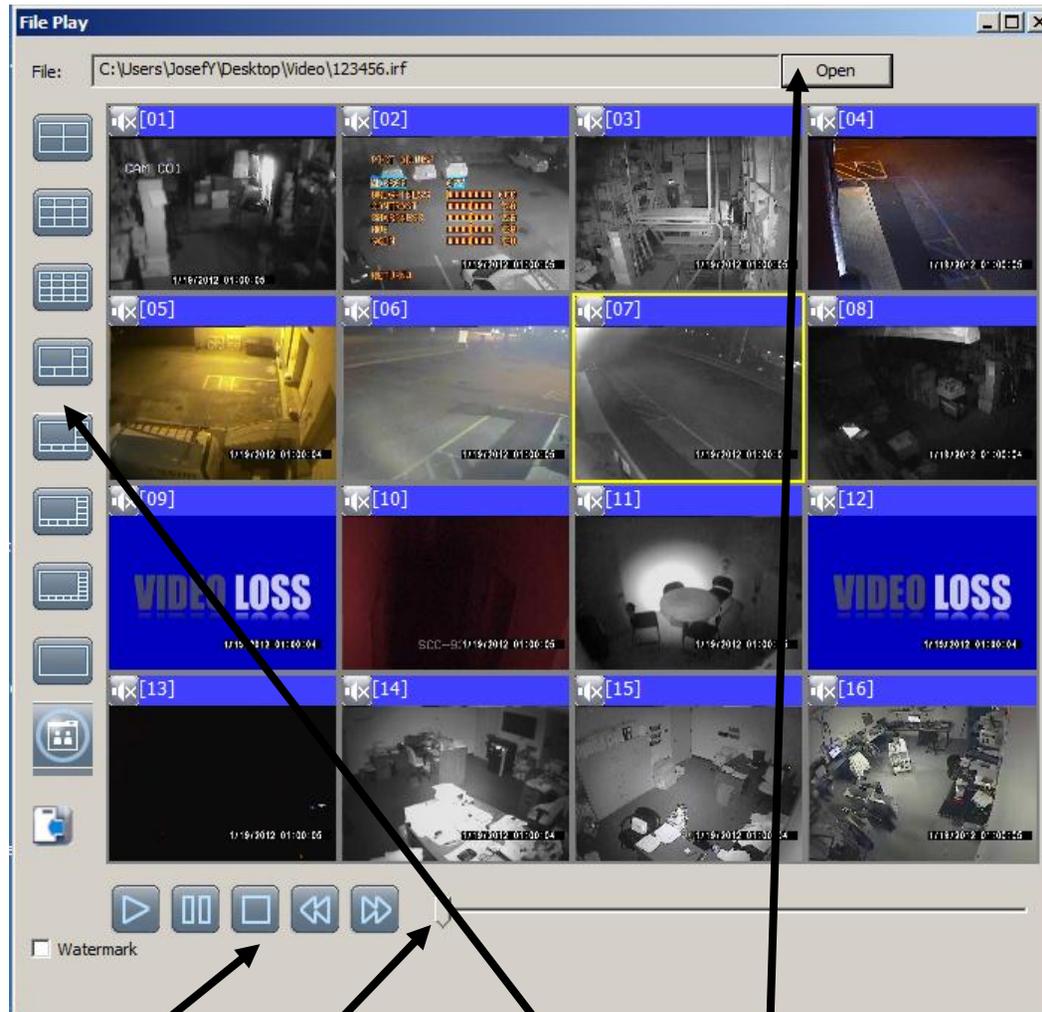

Use **Control** buttons to play, pause, stop, rewind and fast-forward recorded video.

To replay video, drag the **slider** all the way to the left. To view a single camera, double click on that camera.

If needed to view different layouts, use **Options** on the left side.

Multiple files on a disk can only be played one at the time. To select next video to view, click on **Open** button to go back to DVD disk, and then double click the next file on the disk.